

Remote Operation

SAT Mode

To use the features described in this section, make sure you are in SAT mode by pressing the SAT Mode button.

Note: Some features may not be available depending on your receiver model.

Volume & Mute Buttons

Control TV volume

Programming required (see C-4)

Press this button for SAT Mode

Receiver Power & TV Power

Top button turns the receiver on/off,
Bottom button turns the TV on/off
Programming required (see C-4)

Page Buttons

Page up/down in menus

Program Guide

Display current and future satellite program listings

Browse

See what is on other channels while watching TV

Arrows/Select Buttons

Channel up/down, navigate through menus and select a desired option

View Satellite Programming

Exit out of any menu/guide and go back to viewing live TV

Number Buttons

Enter a channel number, or navigate through menus

System Wizard

Press and hold to fix remote control issues and sync data

DishHOME

Explore interactive TV features

Input

Press once for Input, Press and hold for Recover

Receiver Menu

Access receiver features and settings

Themes

Search for programs using Themes

Recall

Go back to last channel viewed

Info

Get info on programs

Search

Search for a program

Shortcut Keys

(for future use)

Digital Video Recorder (DVR) Buttons

Pause live TV and play or record programming

Format

Format the picture to the desired width to match the program you are viewing

Picture-In-Picture (PIP) Buttons

Watch two separate programs at once (in Single Mode)

